



Visual Training

Printing a Journey Ticket on a TranScan® Rigid



Press the button three times and the display will read "JOURNEY TICKET", after a short pause a Journey Ticket will be printed.



To abandon the printing of a Journey Ticket, press the button and the display will read "abandoned".