

Visual Training

Replacing a Paper Roll in a TranScan® Rigid



To release the tray press the cover, pull out the tray and remove the cover by releasing the lip.



Remove and discard the remains off the old paper roll.



Load the new paper roll onto the holder (the paper must feed forward from the top).



Feed the leading edge of the paper into the slot at the top of the printer mechanism (press the blue button to operate the printer).



Close the tray and replace the cover.

